 

# Middle & High School Interactive Display Quicksheet



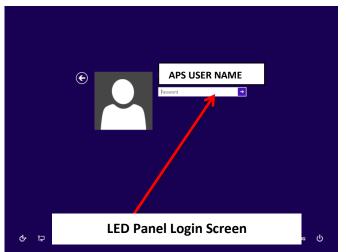

## 1) POWER

Turns the LED Display On/Off.

# 2) LED

Shows Power ON mode -- BLUE
Shows Power Saver mode by blinking RED
Shows Power OFF mode -- RED

# 3) SOURCE

Switches from PC mode to Video mode. Changing the source is only allowed for external devices that are connected to the LED Display.

#### 4) IR Sensor

Aim the remote control towards the IR sensor to send commands using your display's remote control.



Windows 8.1 Desktop

Shortcuts to favorite or frequently used programs can be added.



Windows 8.1 Apps


Swipe up to access all apps and programs.

To access Oktopus

(Annotation software) select the icon from the Apps screen.



#### **Quick Tool Palette**

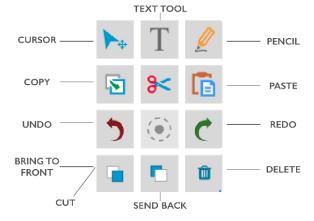

#### File Menu

■ New

Open
Save

Save as PDF
Print

# **Oktopus Software Overview**



# ≤ ♦



### **Aerial View**

